

SMART ACCESS LOCK A6

USER MANUAL v1.0

Specification

Model

A6

Material

Aluminum alloy / Tempered glass panel

Unlock Mechanism

App, PIN Code, Card, Fingerprint(optional)

Connectivity

Zigbee

Input

AC 110V-240V 50-60Hz

Output

DC 12V 3A

Compatibility

iOS/Android

User Capacity

1000 cards, 100 passwords, 100 fingerprints (optional)

Card Type


Encrypted M1 card

Card Sensing Distance

> 5mm

Backlight keypad

Easy to operate at night

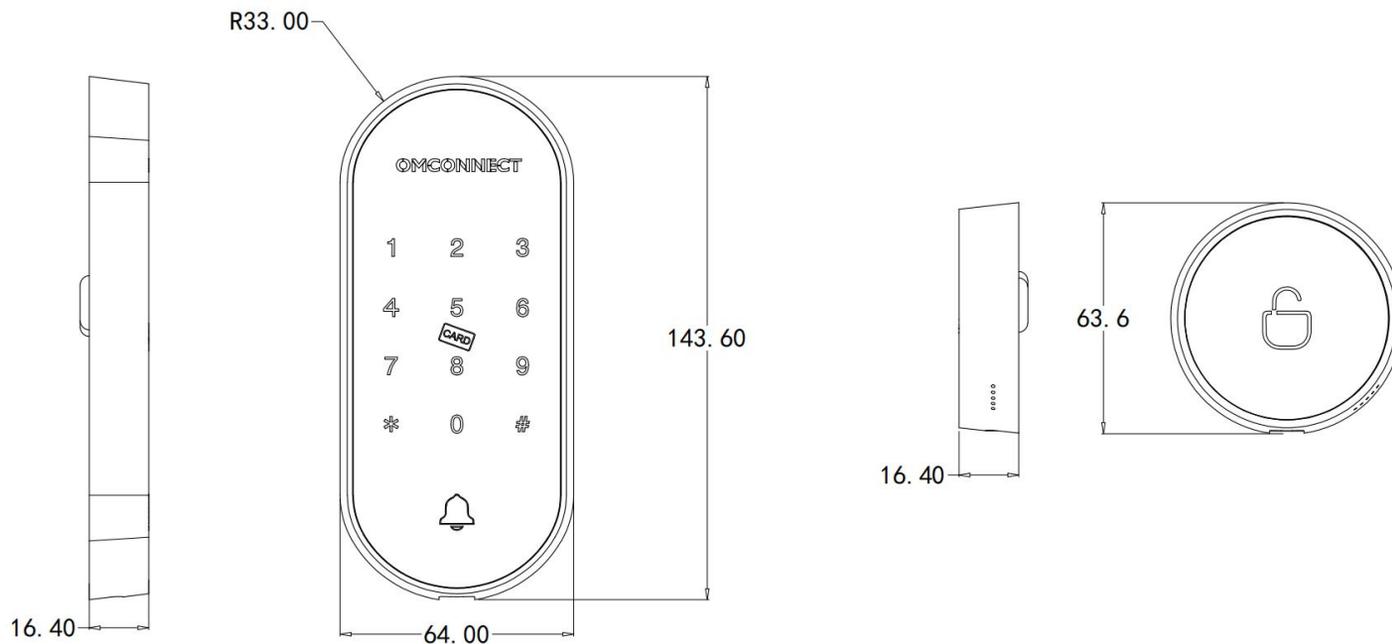

Package Including:


- 1 * Access Control Keypad
- 1 * Exit Button
- 5 * Cards
- 1 * DC12V 5A Power Supply (Optional)
- 1 * 180KG Magnetic Lock (Optional)



Installation


Access Control Keypad Installation

- Drill 4 holes on the wall/door for the Self tapping screws and 1 hole for cable
- Put the rubber bungs to into the 4 holes
- Fix the bracket firmly on the wall with 4 Self tapping screws
- Fix the bracket and keypad with the one fixing bracket screw
- Thread the cable through the cable hole
- Installed successfully

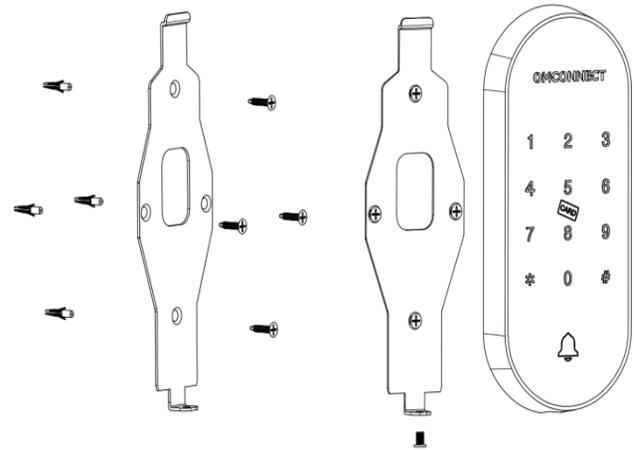

Exit Button Installation

- Drill 2 holes on the wall/door for the Self tapping screws and 1 hole for the cable
- Put the rubber bungs to into the 2 holes
- Fix the bracket firmly on the wall with 2 Self tapping screws
- Fix the bracket and Exit Button with the one fixing bracket screw
- Thread the cable through the cable hole
- Installed successfully

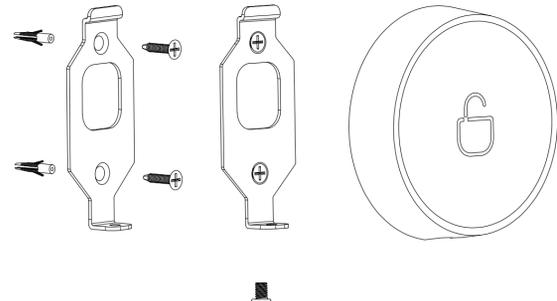

Mechanical Instructions

Password & Factory Mode:

1. Password Length

- Password must be 6 digits (no more or less)

2. Change Admin password

- Long Press # for 3 seconds
 - >. Enter admin password + #
 - >. Enter new admin password + #
 - >. Enter new admin password again and tap #

3. Add User Password

- Tap # +0+ # until the blue light blinks
 - >. Enter admin password + #
 - >. Enter new user password + #
 - >. Enter new user password again and tap #

4. Delete User Password

- Tap # + 2 + # until the blue light blinks
 - >. Enter admin password + #
 - >. Enter the user password you want to delete and tap #
 - >. Enter the user password you want to delete again and tap #

5. Add IC Card

- Tap # +3+ # until the blue light blinks
 - >. Enter admin password + #
 - >. Put the IC Card on the keypad
 - >. New IC Card has been added.

6. Delete IC Card

- Tap # +4+ # until the blue light blinks
 - >. Enter admin password + #
 - >. Put the IC Card on the keypad
 - >. The IC Card has been deleted.

7. Factory Reset

- Tap # +00000+ # + admin password + #

APP Instructions

Download Mobile App

Scan QR Code below and download the App, you can also choose to download other App supported by Tuya.



Connect APP:

Tap # +9+ #+admin password + #

Connect Zigbee Gateway:

1. Click "+" and then click "Add Device"

You will see the detected device and click "add".

Connecting, you need to wait for a few seconds to let it finish.

Device added.

2. Add a access lock on the gateway page

Press and hold the reset button of the lock to beep 11 times and the light on the touch panel starts to flash on the same time, then release it, and then the lock is ready to pair.

Click "Add subdevice"

Click "LED already blink"

You will see the detected device and click the device, device will be added successfully after a few seconds.

How to Unlock

Long press the unlock button on the APP to unlock.

How to Add Password

Follow the voice prompts, enter the "password" + "#" to be set

Enter "password" + "#" again,

The password has been set successfully

APP Instructions


How to Add Temporary Lock

- ☑ Click unlock ways,
- ☑ Click "+" and then choose temporary lock,
- ☑ Click "Dynamic password" and then click "get password" which is valid for 5 minutes.



How to Add Family Member

- ☑ Click unlock ways,
- ☑ Click "+" and then choose family lock,
- ☑ Filling the member information (name, Region, Account, Family role),
- ☑ Member Added.
- ☑ Click the member you want to set to and then add fingerprint, password or card.

Wiring

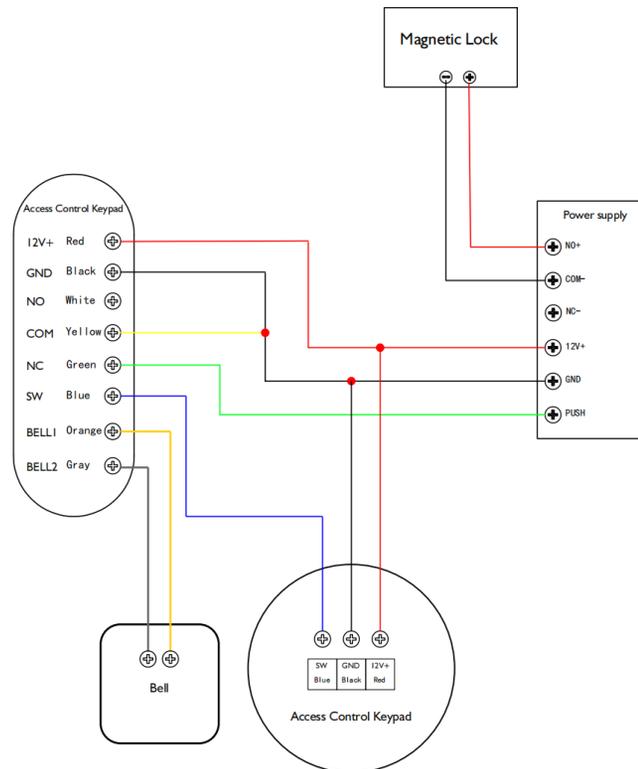

Wiring

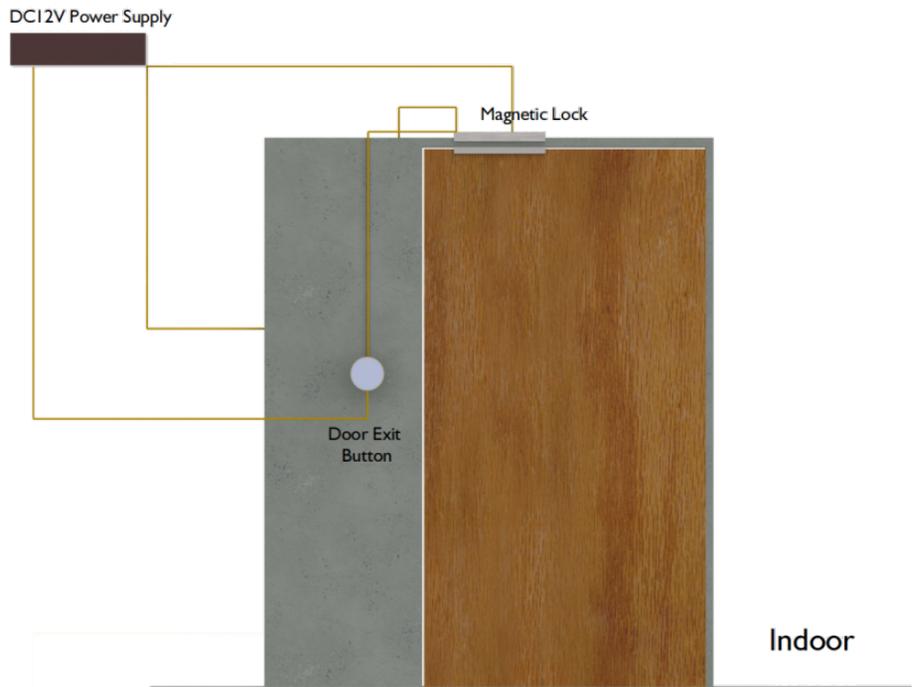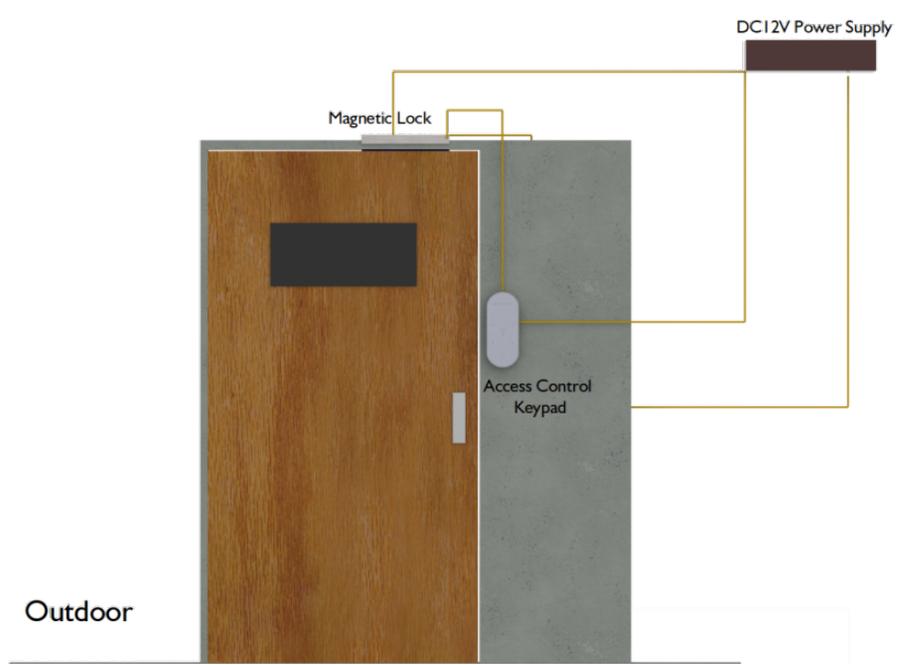

WARRANTY

Warranty Terms and Conditions

Supplier warrants that the proper functioning of the Products and their absence of defects and defaults for a period of two years from the delivery of the Products.

The Supplier's warranty shall be valid for a period of 2 year from the delivery of the Products.

No guarantee will be payable by the Supplier if the below defect of the product

(i) is attributable to the Distributor or (ii) originates from an accident, maintenance or improper use of the Product.

OMUARK

WWW.OMCONNECT.COM / WWW.OMUARK.COM